




SUNROTOR[®] Solar Products

Solar Powered Water Pumps & Accessories

HOW TO CHANGE THE ROTOR AND STATOR*

Instructions:

1. Remove debris guard with a phillips screwdriver.
2. Remove top of pump with a socket.
3. Remove stator from pump housing.
4. Remove pump housing with an allen.
5. Remove set screw in the stator with an allen.
6. To remove rotor, secure motor shaft and turn rotor clockwise.

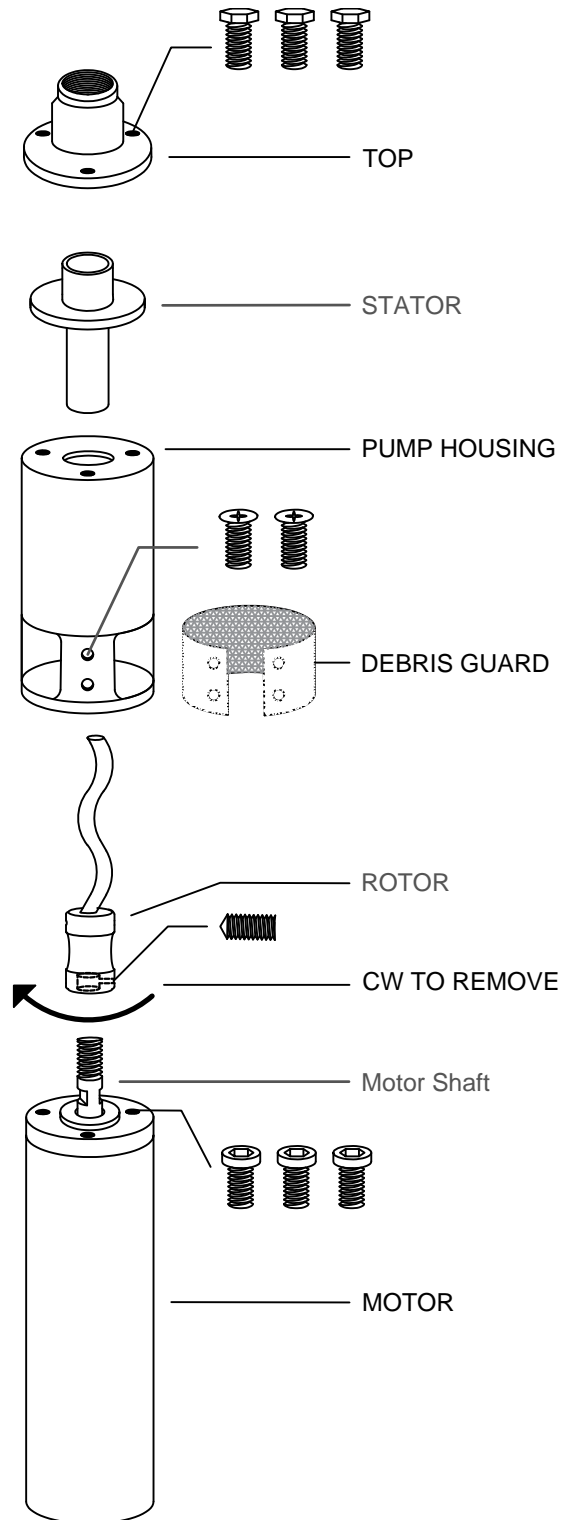

*HELICAL ROTOR PUMPS ONLY